



ADVANCED ALARMS MACKAY PTY LTD

ACN 073 322 899 ABN 38 327 728 744

Address: 107 Evan Street
South Mackay Qld 4740

Telephone: (07) 4951 1110
A/H Service: 0418 955 992
Facsimile: (07) 4951 3193
Email: admin@aamky.biz

MOST COMMONLY ASKED QUESTIONS

DSC 864 LCD Partitioned System

TO ARM

Press and hold down # until prompted with area list. Press and hold the area number you wish to arm, wait until the 'READY' indicator is on and enter your access code. Ensure the 'ARMED' indicator is now on.

TO DISARM

Press and hold down the # until prompted with area list. Press and hold the area number you wish to disarm, enter your access code. Ensure the 'ARMED' indicator is now off.

TO BYPASS A SECTOR

Hold down # until prompted with area list. Select area, press *1 and enter your access code *if required*, the 'BYPASS' displays on screen. Enter the 2-digit zone number to be bypassed (i.e. 01 for zone number 1)

Press # to exit, the 'BYPASS' indicator will remain on.

TO VIEW ALARM MEMORY

When an alarm occurs, the 'MEMORY' indicator will turn on.

To view which zone caused an alarm, press *3, the 'MEMORY' indicator and zone number will flash. The alarm memory will clear next time the system is armed.

TO VIEW TROUBLE CONDITIONS

When a system fault is detected, the 'TROUBLE' indicator will turn on and the keypad will beep every 10 seconds. Press the # key to silence the beeps.

To identify the trouble condition, press *2, the 'TROUBLE' indicator and a zone number will flash, refer to your user manual.

Press # to exit, the 'TROUBLE' indicator will remain on until the fault is rectified.

Contact the control room on 1300 138 050

24 Hour Emergency Service 0418 955 992.

IF IN DOUBT REFER TO YOUR USER BOOKLET