



# ADVANCED ALARMS MACKAY PTY LTD

ACN 073 322 899 ABN 38 327 728 744

Address: 107 Evan Street  
South Mackay Qld 4740

Telephone: (07) 4951 1110  
A/H Service: 0418 955 992  
Facsimile: (07) 4951 3193  
Email: [admin@aamky.biz](mailto:admin@aamky.biz)

## MOST COMMONLY ASKED QUESTIONS

### DSC 864 LCD

#### TO ARM

Wait until the 'READY' indicator is on and enter your access code. Ensure the 'ARMED' indicator is now on.

#### TO DISARM

Enter your access code. Ensure the 'ARMED' indicator is now off.

#### TO BYPASS A SECTOR

Select area, press \*1 and enter your access code *if required*, the 'BYPASS' displays on screen. Enter the 2-digit zone number to be bypassed (i.e. 01 for zone number 1)

Press # to exit, the 'BYPASS' indicator will remain on.

#### TO VIEW ALARM MEMORY

When an alarm occurs, the 'MEMORY' indicator will turn on.

To view which zone caused an alarm, press \*3, the 'MEMORY' indicator and zone number will flash. The alarm memory will clear next time the system is armed.

#### TO VIEW TROUBLE CONDITIONS

When a system fault is detected, the 'TROUBLE' indicator will turn on and the keypad will beep every 10 seconds. Press the # key to silence the beeps.

To identify the trouble condition, press \*2, the 'TROUBLE' indicator and a zone number will flash, refer to your user manual.

Press # to exit, the 'TROUBLE' indicator will remain on until the fault is rectified.

**Contact the control room on 1300 138 050**

*24 Hour Emergency Service 0418 955 992.*

**IF IN DOUBT REFER TO YOUR USER BOOKLET**