



MOST COMMONLY ASKED QUESTIONS

DSC 864 Icon

TO ARM

Wait until the 'READY' indicator is on and enter your access code. Ensure the 'ARMED' indicator is now on.

TO DISARM

Enter your access code. Ensure the 'ARMED' indicator is now off.

TO BYPASS A SECTOR

To bypass a zone press *1 and enter your access code *if required*, the 'BYPASS' indicator will flash. Enter the 2-digit zone number to be bypassed (i.e. 01 for zone number 1)

Press # to exit, the 'BYPASS' indicator will remain on.

TO VIEW ALARM MEMORY

When an alarm occurs, the 'MEMORY' indicator will turn on.

To view which zone caused an alarm, press *3, the 'MEMORY' indicator and zone number will flash. The alarm memory will clear next time the system is armed.

TO VIEW TROUBLE CONDITIONS

When a system fault is detected, the 'TROUBLE' indicator will turn on and the keypad will beep every 10 seconds. Press the # key to silence the beeps.

To identify the trouble condition, press *2, the 'TROUBLE' indicator and a zone number will flash, refer to your user manual page 24.

Press # to exit, the 'TROUBLE' indicator will remain on until the fault is rectified.

Contact the control room on 1300 138 050

24 Hour Emergency Service 0418 955 992.

IF IN DOUBT REFER TO YOUR USER BOOKLET